

How to re-tune to the new frequency of JSTV HD TechniSat TECHNISTAR S2


<<Buttons you need>>

Our frequency has been updated.

If you have a TechniSat TECHNISTAR S2, please follow the instructions below to add JSTV HD channels to your decoder.

If your decoder is currently connected to the TV with a SCART cable, connecting with a HDMI cable will allow you to watch JSTV with a higher resolution.
Please note that changing cables means you need to choose a different TV input channel such as HDMI 1.

Please aim the remote control toward the decoder and operate slowly. If the decoder fails to respond properly, we suggest replacing the existing set of batteries with new ones.

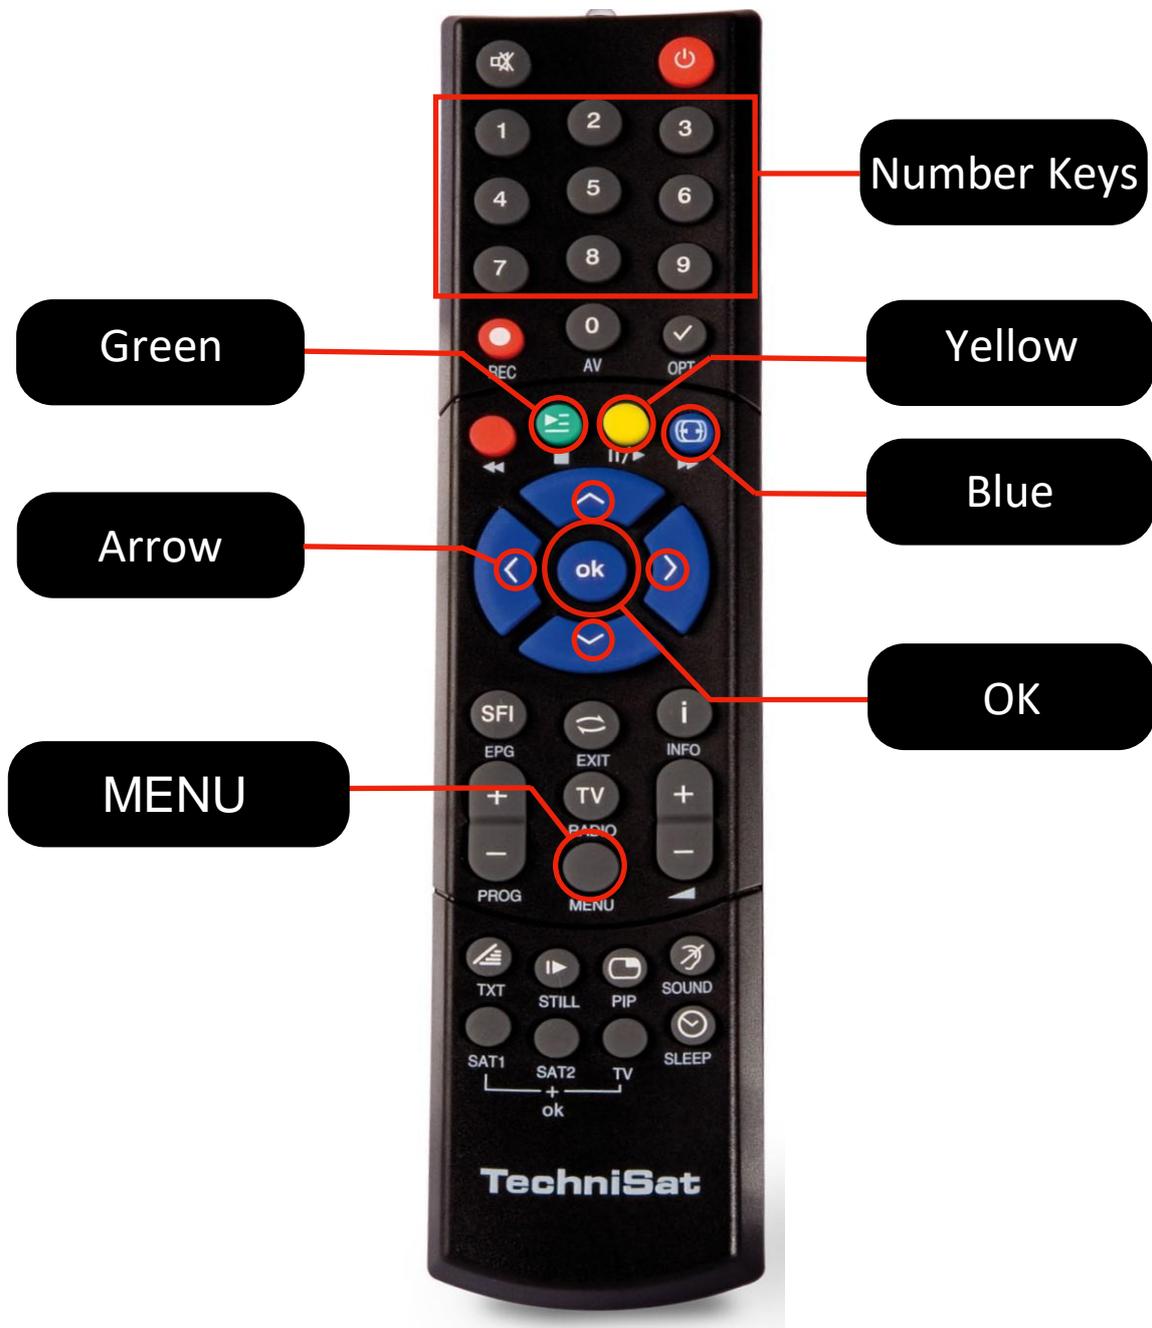

How to edit the channels

(This process will take approximately 5 minutes)

1 Press the **Menu** button on your remote control to show the **Main menu** on your screen.

2 Using the arrow button, select TV list organizer (fourth item on the list) and press the OK button.



3 When the TV list organizer menu screen appears, make sure the cursor is on the right side of the screen. If the cursor is on the left side, press the **green** button and move the cursor to the **TV list** on the right.



4 Using the **arrow** buttons on your remote control, move the cursor to the channel **JSTV 1 HD**.

5 Press the **yellow** button on your remote control to display the triangle mark next to the channel name.



6 Press the number 1 button, then the **OK** button on your remote control to move **JSTV 1 HD** as channel 1. The triangle mark will disappear when the transaction completed.



7 Repeat step “5” and “6” to move **JSTV 2 HD** as channel 2.



Press Menu button to save your settings and exit the Main menu.

Now, you have successfully added the JSTV channels as No.1 and No.2 on your TV list.

Please follow the instruction below to remove the old channels.